




**30" GAS FREESTANDING RANGE
(Electronic Ignition)**

MODELS:

WFG505M0BW0 (White)
WFG505M0BB0 (Black)
WFG505M0BS0 (Stainless)

COOKTOP PARTS

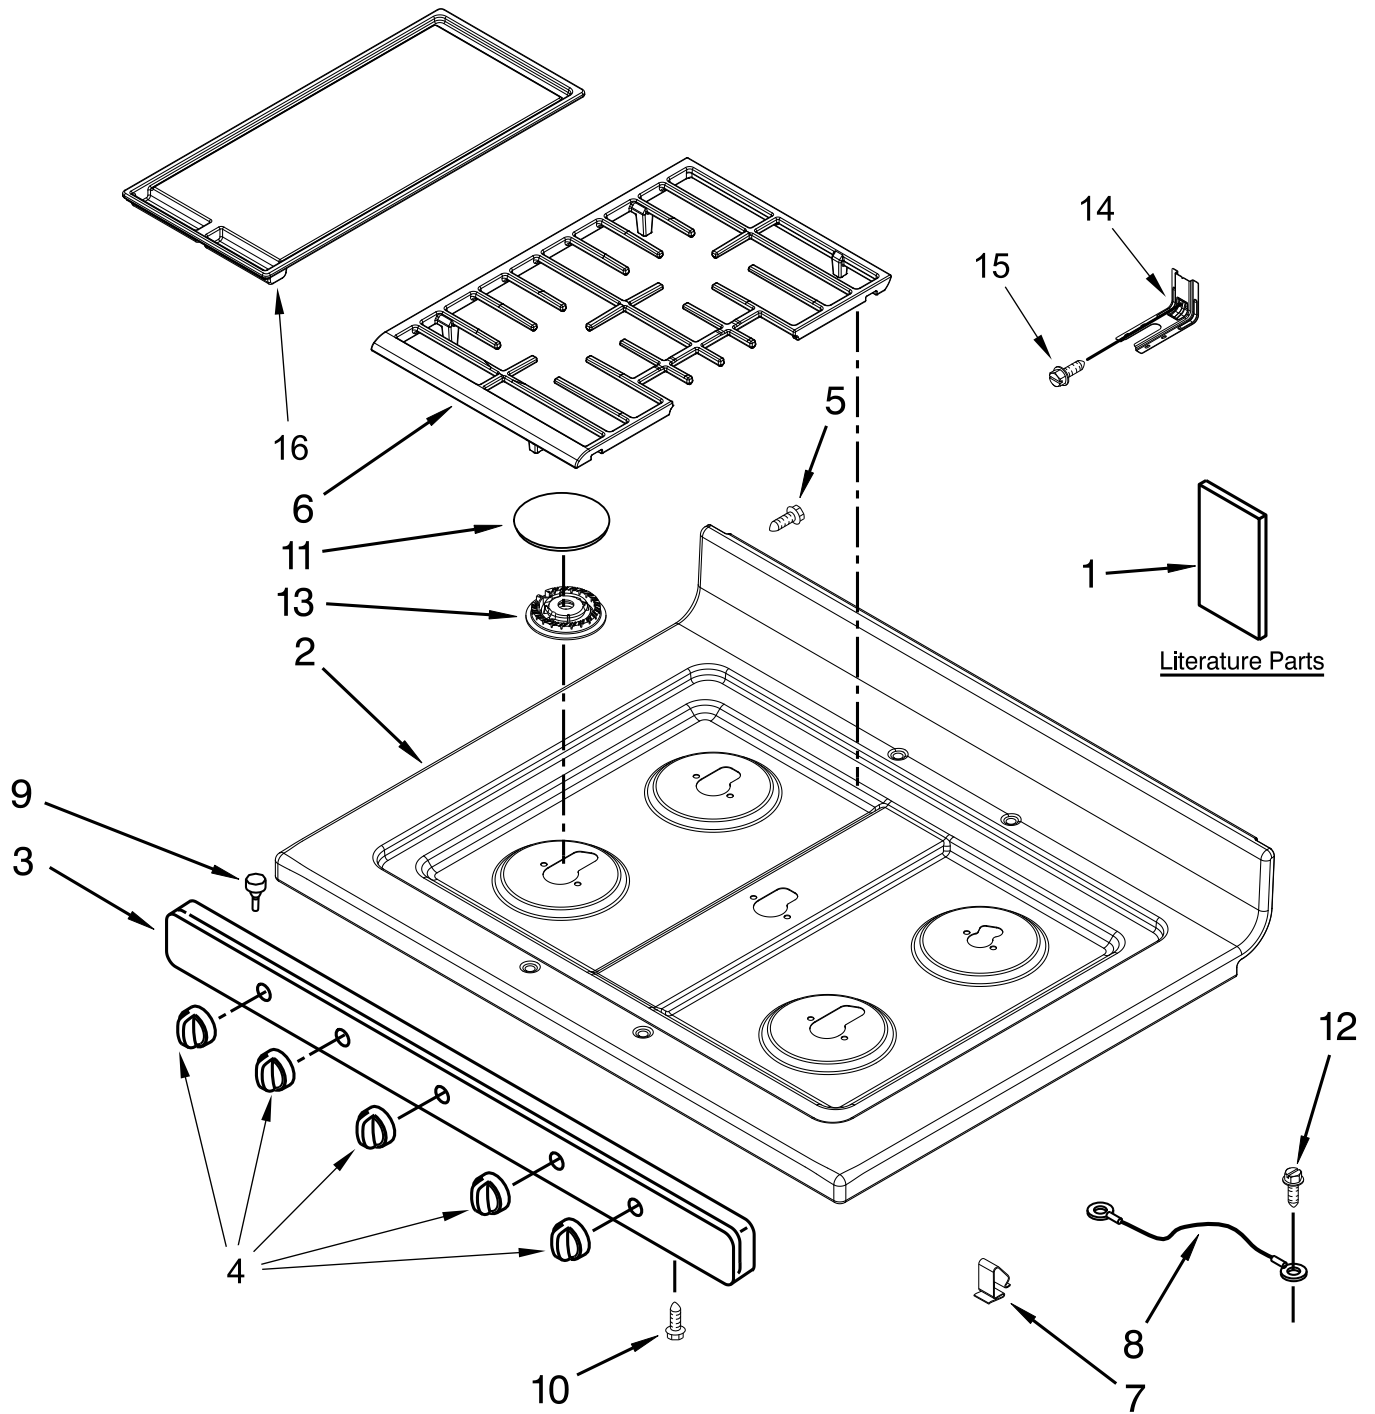


COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10616596	Instructions, Installation
	W10614907	Guide, Use and Care
	98007130	Tips, Safe Cooking (English)
	W10200950	Tech Sheet
2		Cooktop
	W10527865	White
	W10527866	Black
3		Panel, Manifold
	W10620549	White
	W10620550	Black
4		Knobs
	W10339443	White
	W10339442	Black
5	98007225	Screw
6		Set, Grate
	W10620480	Black
7	98004722	Clip, Cooktop
8	6610473	Wire, Ground

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	98013389	Bumper, Cooktop
10	98005000	Screw
11		Cap, Burner
	W10183368	Black (Left Front & Right Front)
	W10183369	Black (Left Rear and Center)
	W10183370	Black (Right Rear)
12	8534079	Screw, Ground
13	W10515455	Burner Head, Ultra Rapid (15K) (Left Front & Right Front)
	W10515454	Burner Head, Semi (9.5K) (Left Rear and Center)
	W10515453	Burner Head, Auxi (5K) (Right Rear)
14	W10613666	Bracket, Anti-Tip

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15	7101P485-60	Screw, Anti-Tip
16	W10554125	Griddle
		FOLLOWING PARTS NOT ILLUSTRATED
	W10544364	Harness, Main
	98005896	Clip, Wire
	3196696	Clip, Harness
	3391018	Tie, Cable
	98015022	Bushing, Snap
	98005894	Clamp, Cord


BACKGUARD PARTS

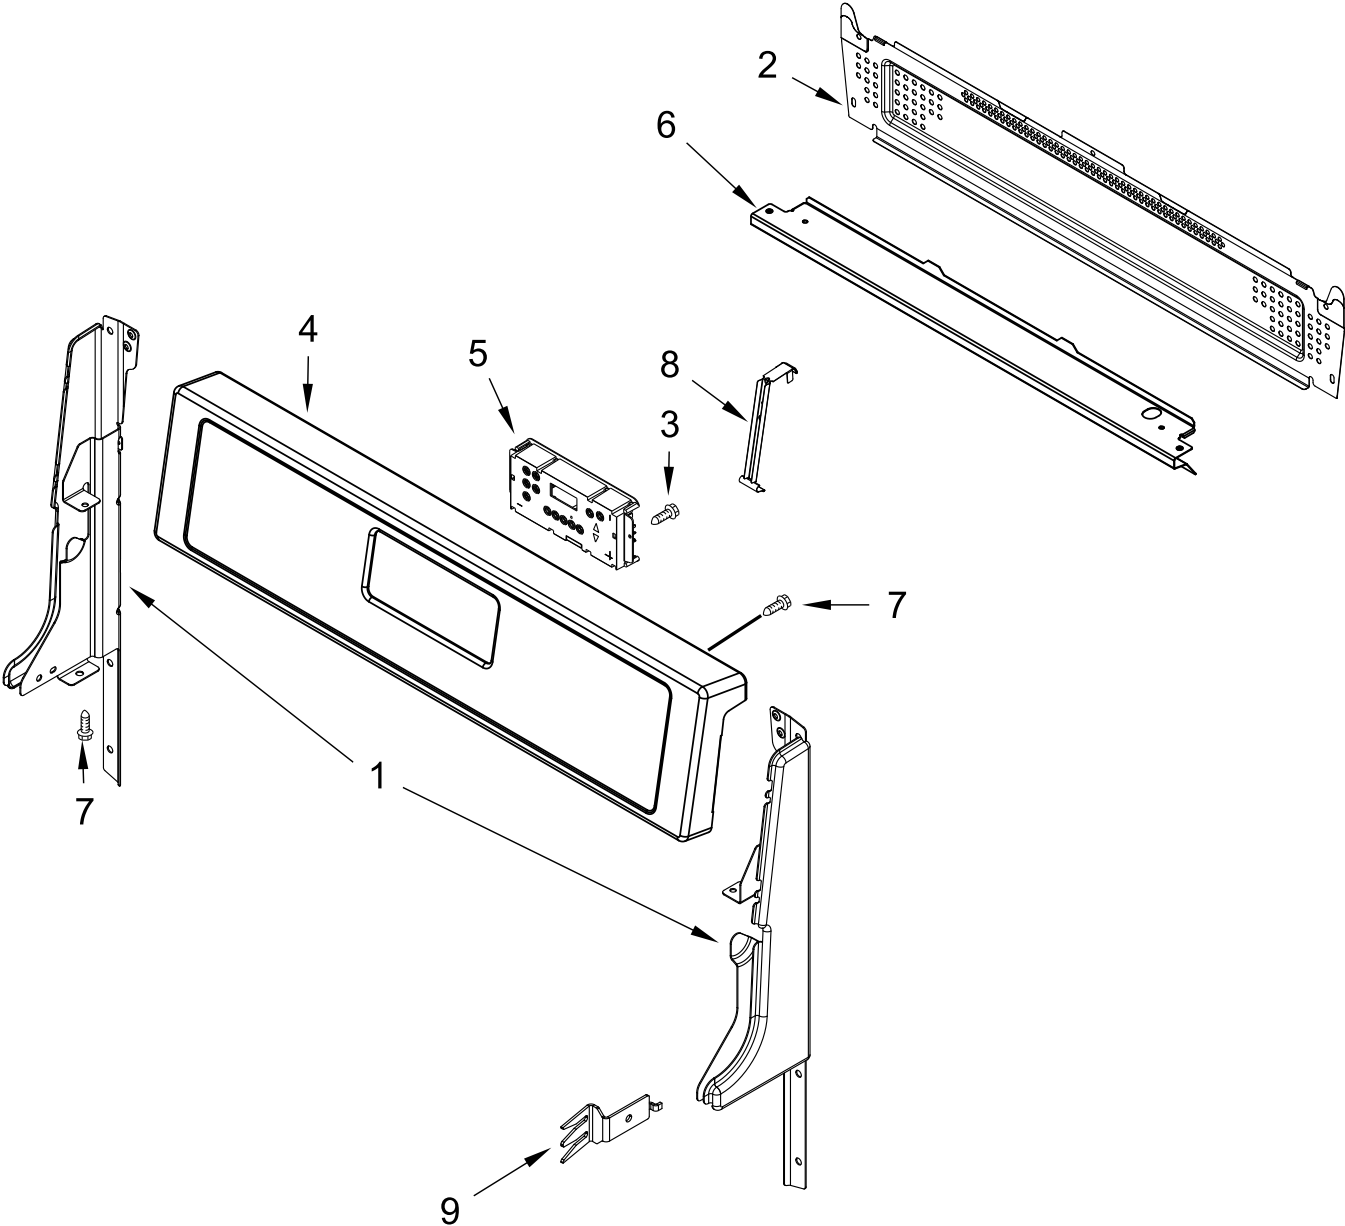

BACKGUARD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap (Left Hand)	4		Panel, Control	6	W10535746	Bracket, Console Mount
	W10662110	White		W10535676	White	7	98005000	Screw
	W10662115	Black		W10535677	Black	8	W10324410	Bracket, Control
		Endcap (Right Hand)		W10585590	Black with Overlay (Stainless Model)	9	W10535815	Bracket, Rear
	W10661915	White	5		Control, Electronic			
	W10661916	Black						
2	W10535808	Backguard, Rear		W10556709	White			
3	98006633	Screw		W10556710	Black			

MANIFOLD PARTS

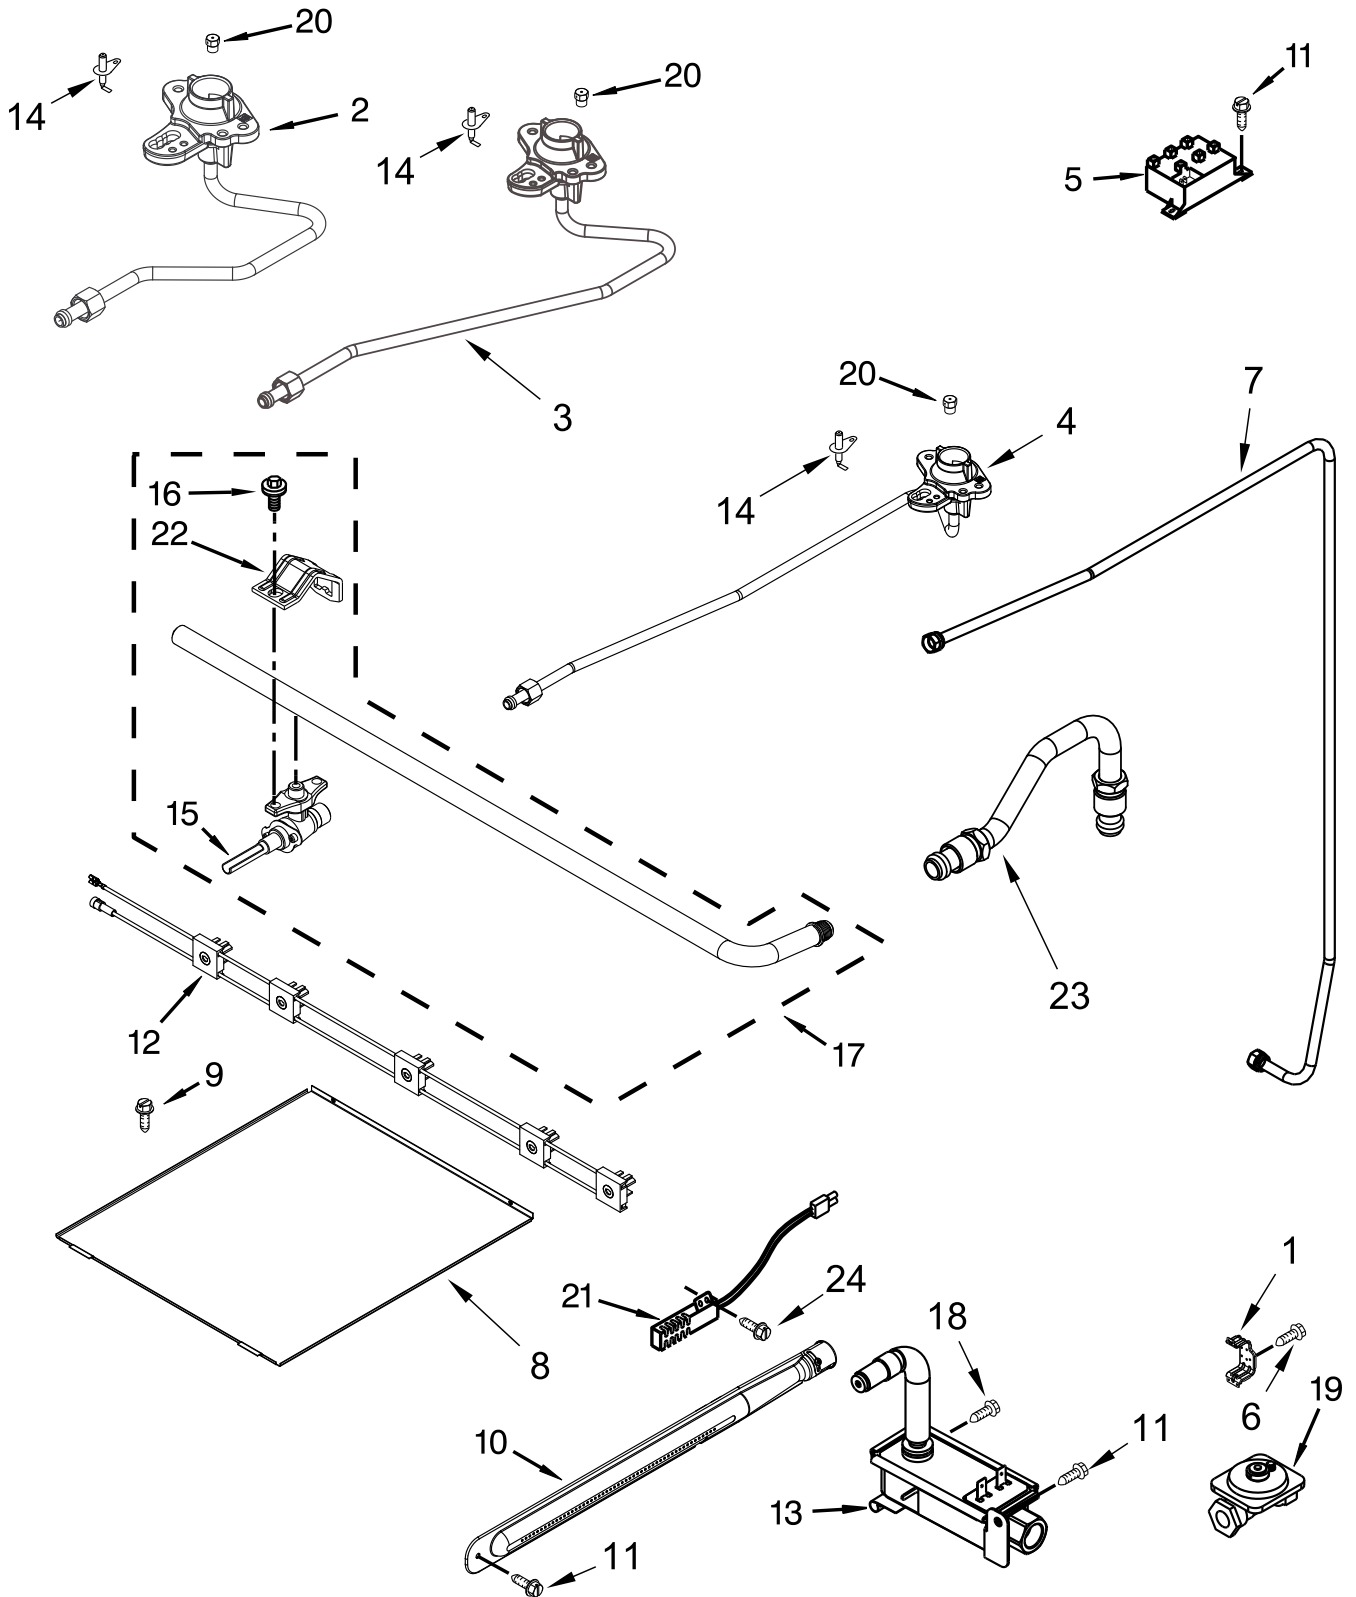


MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	98007410	Bracket, Regulator
2	W10514425	Assembly, Tubing (Left Front)
	W10514426	Assembly, Tubing (Right Front)
3	W10514429	Assembly, Tubing (Center)
4	W10514428	Assembly, Tubing (Left Rear)
	W10514424	Assembly, Tubing (Right Rear)
5	W10110523	Spark Module
6	98007225	Screw
7	W10619922	Tubing, Manifold to Regulator
8	W10670196	Spread, Flame (Bake)
9		Screw
	98006726	Black

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10650358	Burner, Oven
11	98006633	Screw
12	W10548356	Harness, Switch
13	98014893	Valve, Oven
14	W10515459	Electrode
15	W10615569	Valve, Saddle (Left Front & Right Front)
	W10615568	Valve, Saddle (Left Rear and Center)
	W10615567	Valve, Saddle (Right Rear)
16	98017517	Screw
17	W10538763	Tube, Manifold
18	98013634	Screw
19	W10633327	Regulator

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
20	W10347414	Orifice (15K) (Left Front & Right Front)
	W10170507	Orifice (8K) (Center)
	W10170508	Orifice (9.5K) (Left Rear)
	W10170506	Orifice (5K) (Right Rear)
21	98005652	Igniter, Hot Surface
22	W10574737	Bracket, Valve
23	W10512963	Tubing (Regulator to Oven Valve)
24	W10146346	Screw
		Following Parts Not Illustrated
	W10619560	Kit, LP Conversion
	W10622750	Cable, Spark (Black)
	W10623833	Cable, Spark (Natural)

CHASSIS PARTS

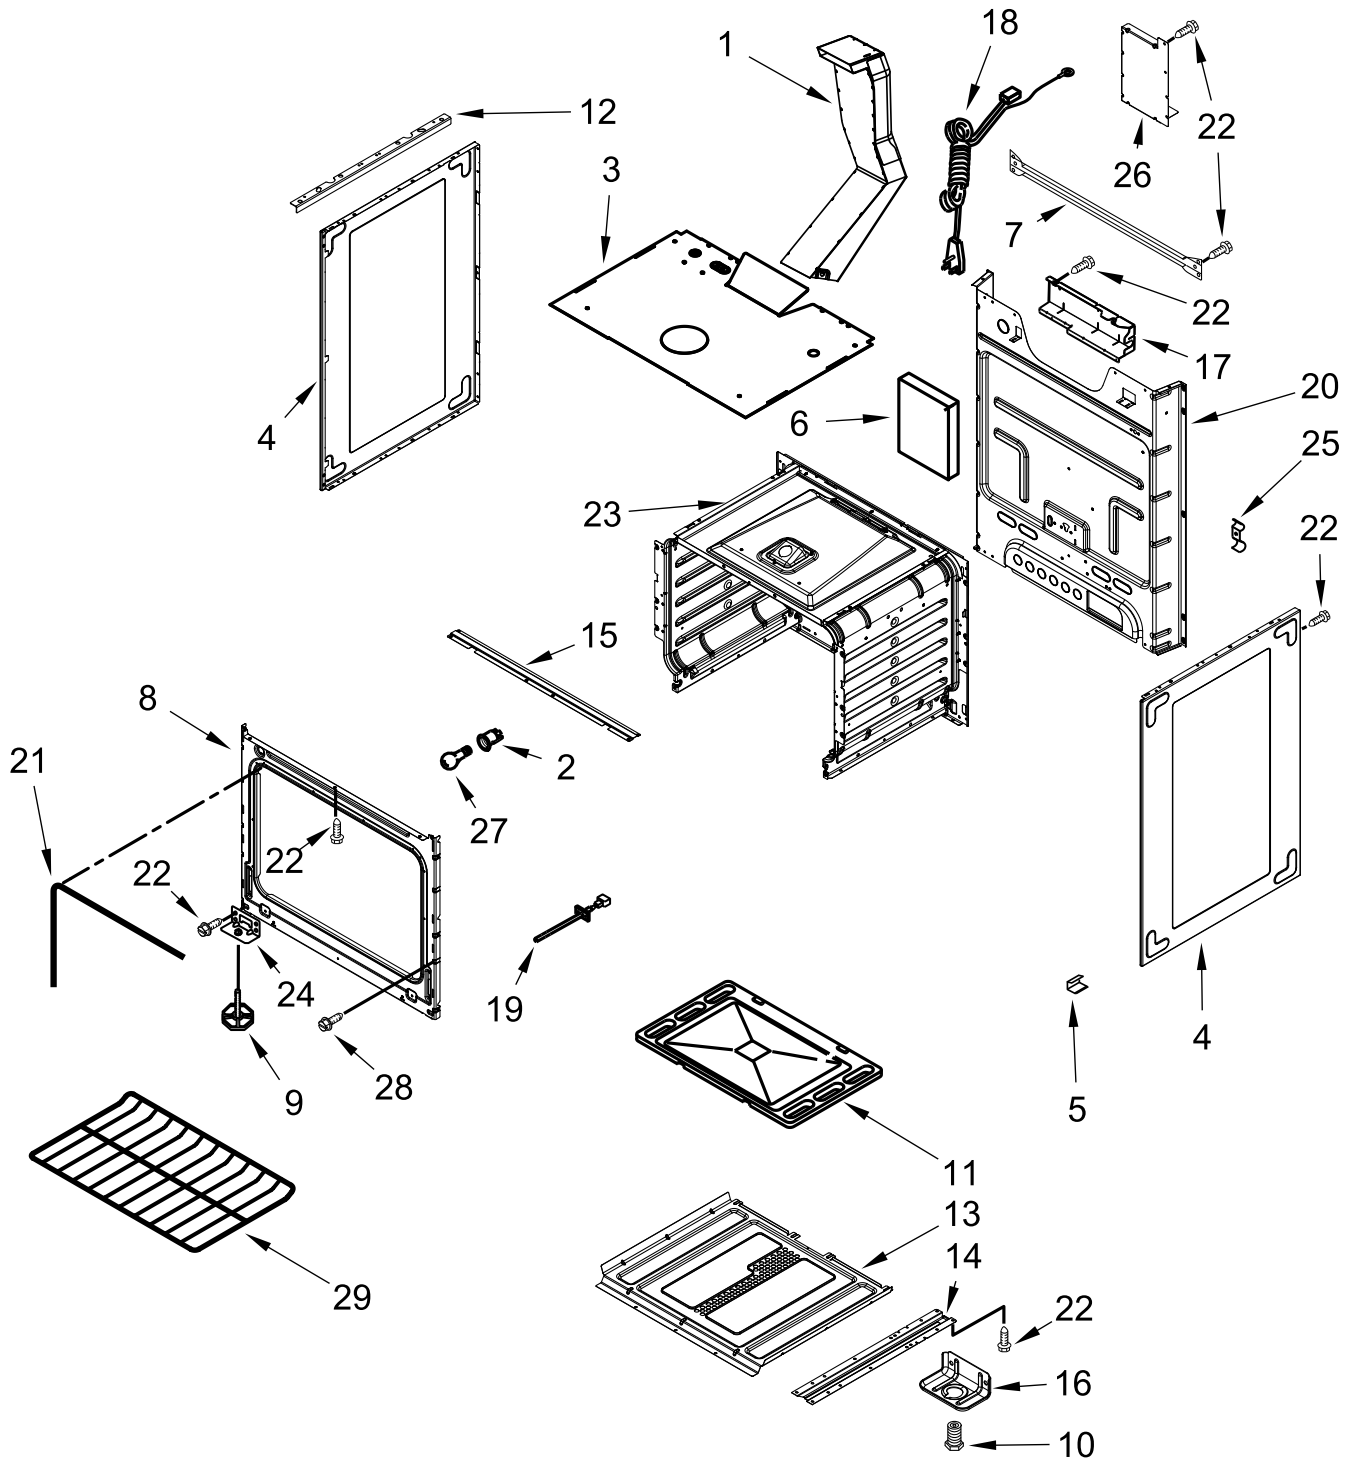


CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10675411	Box, Flue
2	W10554269	Socket, Light Bulb
3	W10636342	Shield, Insulation
4		Panel, Side
	W10666176	White (Left)
	W10666141	White (Right)
	W10666212	Black (Left)
	W10666211	Black (Right)
5	98005502	Clip, Oven Botton
6	98006710	Counterweight
7	98015363	Support, Rear
8		Frame, Front (Not Serviced)
9	W10519868	Foot, Leveling (Front)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10058460	Foot, Leveling (Rear)
11	W10620410	Bottom, Oven
12	W10577312	Support, Side Panel
13	W10670197	Deflector, Oven
14	W10520269	Rail, Base
15	W10545322	Bracket, Manifold
16	W10535682	Bracket, Foot
17	W10549293	Cover, Valve
18	W10640762	Cord, Power
19	W10181986	Sensor, Oven
20	W10554678	Back, Main
21	W10535778	Seal, Oven
22	98006633	Screw
23		Liner, Oven (Not Serviced)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
24	W10562043	Base, Foot
25	98005026	Clip, Tubing
26	W10538845	Cover
27	W10452019	Bulb, Light
28	98008545	Screw, Trim
29	W10550642	Rack, Oven INSULATION
	W10609560	Insulation, Wrap
	W10537475	Insulation, Back
	W10613818	Insulation, Upper
	98004294	Wire Tie, Insulation

OVEN AND BROILER PARTS

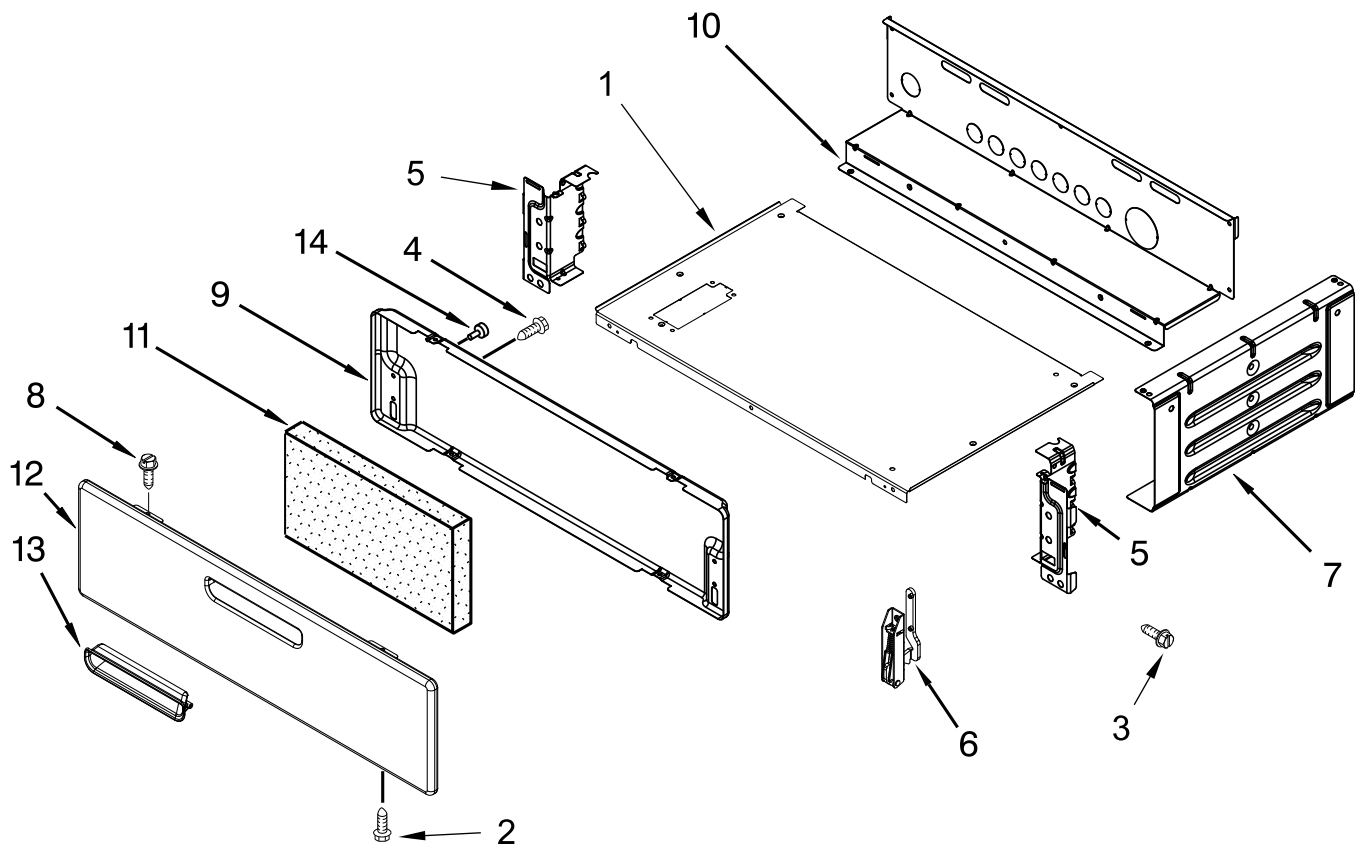


OVEN AND BROILER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10680059	Baffle, Base
2	W10119413	Screw
3	98008545	Screw, Trim
4	W10155121	Screw
5	W10624273	Cover, Broiler Left
	W10624275	Cover, Broiler Right
6	W10647966	Hinge
7	W10605426	Side Panel
8		Screw
	98006726	Black

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10446851	Liner, Broiler Drawer
10	W10364810	Back Cover, Broiler
11	W10216478	Insulation, Broiler Door
12		Panel, Broiler Door
	W10483323	White
	W10393899	Black
	W10482110	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13		Handle, Broiler Door
	W10498563	White
	W10535809	Black
	W10495568	Grey
14	98004052	Bumper, Door

DOOR PARTS

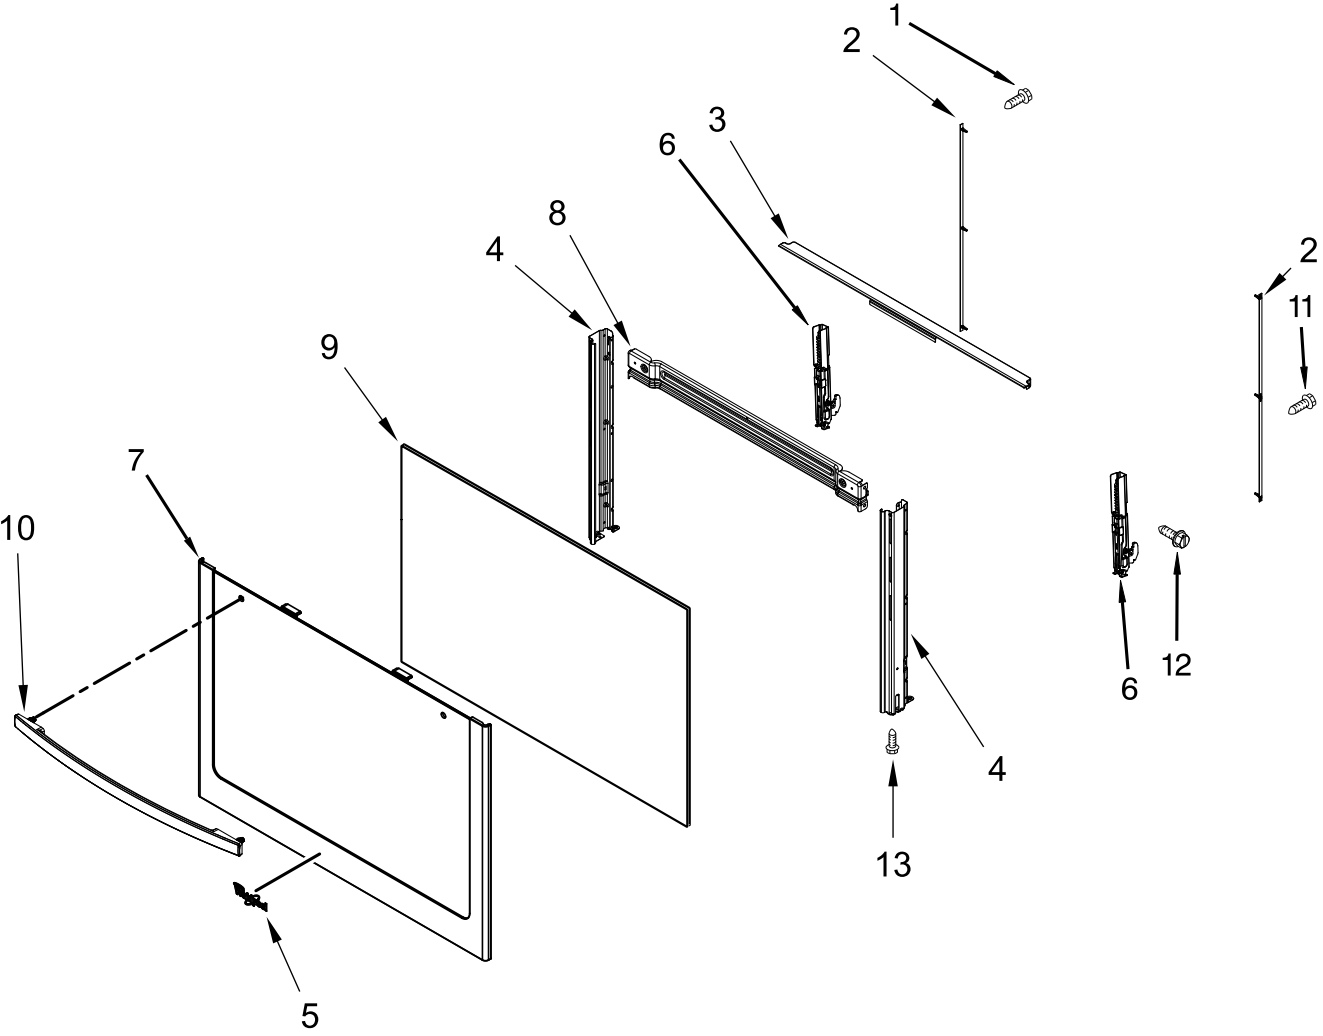

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	98006726	Screw Black
2	W10292266	Seal, Inner Door
3	W10544145	Upper Trim, Oven Door
4	W10445015	Trim, Side Left
	W10445013	Right
5	W10387117	Nameplate White
	W10481433	Grey

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10535788	Hinge, Oven Door (White and Black Models)
	W10420753	Hinge, Oven Door (Stainless Model)
7	W10535777	Panel, Door White
	W10535776	Black
	W10535793	Stainless
8	W10387343	Cross Support
9	W10535767	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10535756	Handle, Oven Door White
	W10535754	Black
	W10397442	Stainless
11	98008699	Screw
12	98006633	Screw
13	W10146346	Screw

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White
	4392900	Biscuit/Bisque

MISCELLANEOUS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	98012220	Kit, Door Pin