




**30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE
Finger Print Resistant**

MODELS:

WFE525S0HZ0 (Stainless)

WFE525S0HV0 (Black Stainless)


COOKTOP PARTS

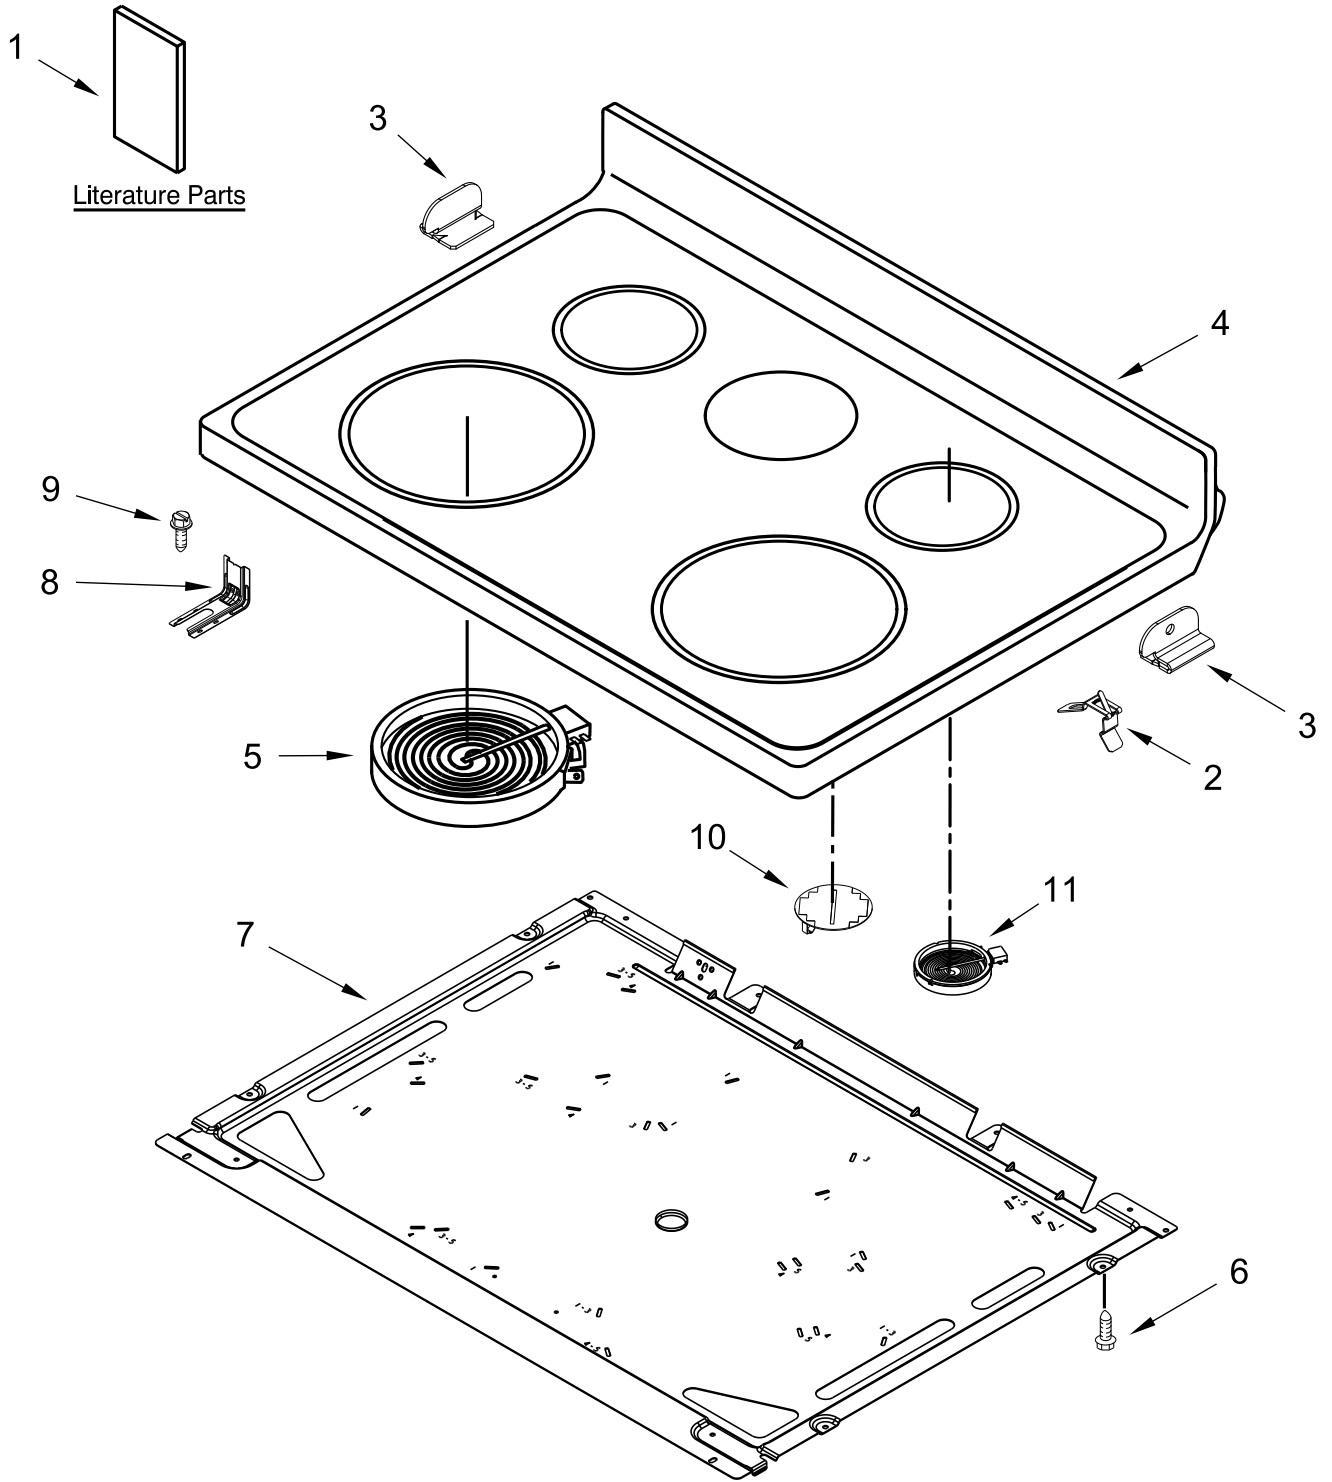

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	11	8273994	Element (1200W) (Left Rear, Right Rear)
	W11102909	Use and Care Guide			(Left Front, Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W10403811	Instructions, Installation	6	3196169	Screw	W11028538		Harness, Main
	W11109898	Wiring Diagram	7	W10691223	Pan, Radiant Element	W11028537		Harness, Cooktop (Right)
	W11102747	Tech Sheet	8	W10306542	Bracket, Anti-Tip	W10848523		Harness, Cooktop (Left)
	9762761	Tips, Safe Cooking (English)	9	7101P485-60	Screw, Anti-Tip Kit	W10174460		Harness, Warm Zone
2	W10225448	Spring, Element	10	W10799048	Element, Warm Zone (Center)			
3	W10607641	Bracket, Cooktop (Left)						
	W10607642	Bracket, Cooktop (Right)						
4		Cooktop						
	W11034833	Black						


CONTROL PANEL PARTS

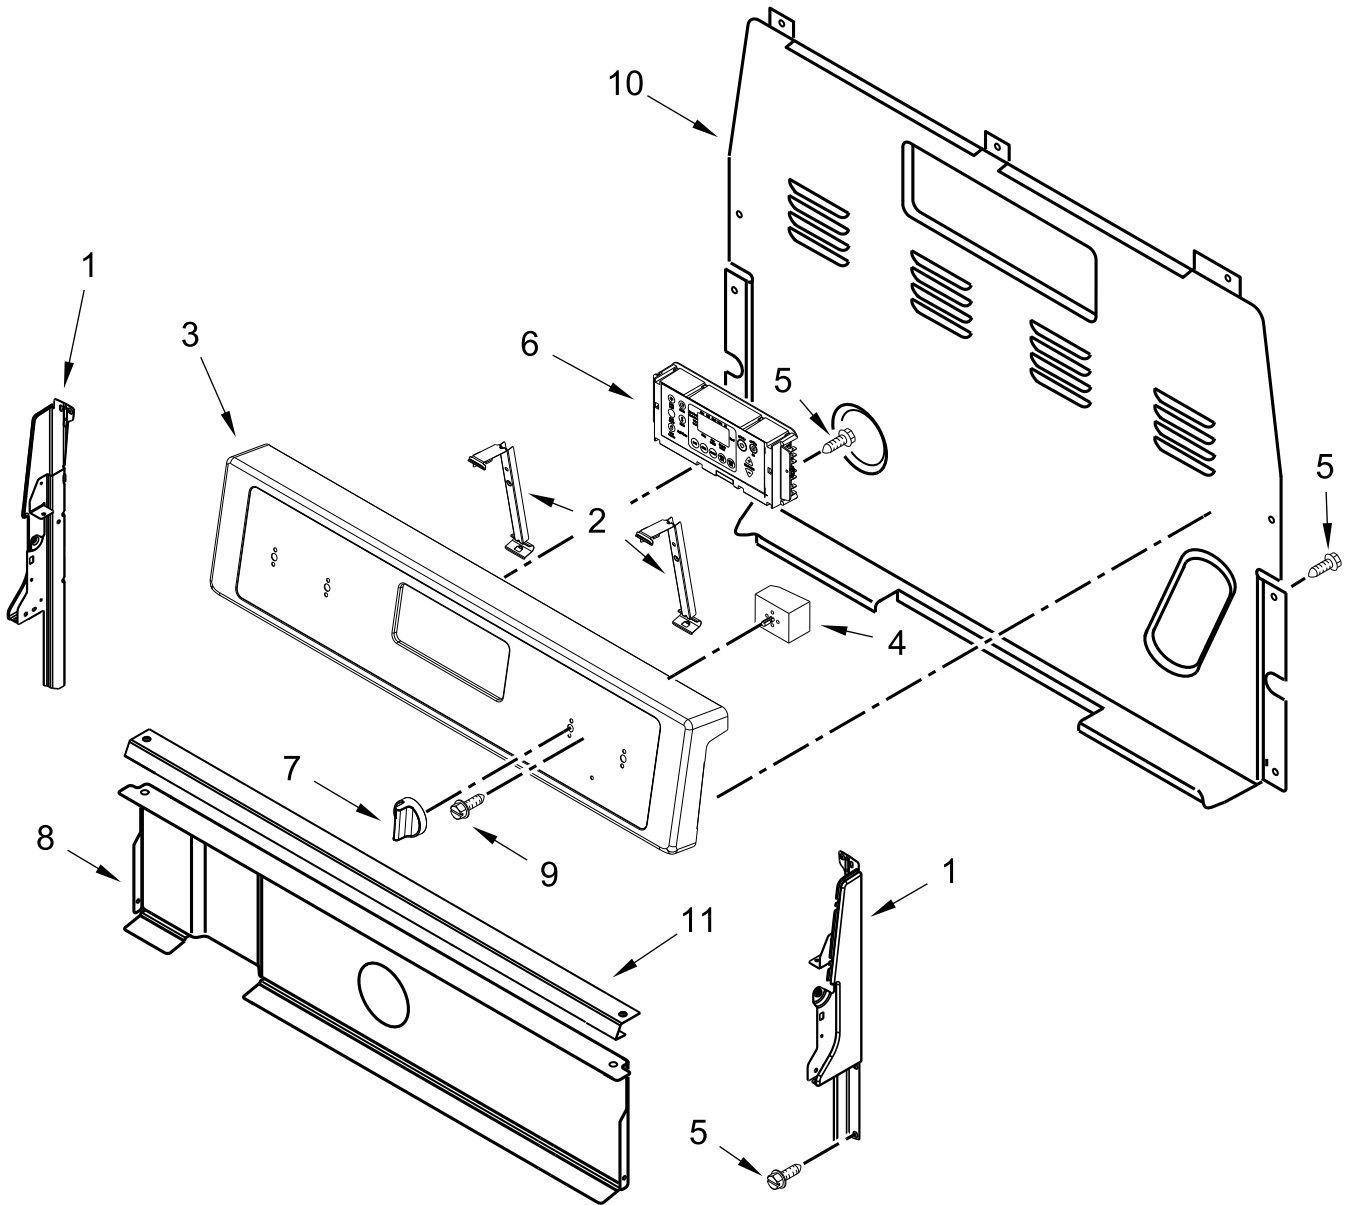

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W10184437	Black (Left)			(Left Front, Right Front)		W11022717	Stainless
	W10184438	Black (Right)					W11027166	Black Stainless
2	W10695491	Bracket, Control		3148951	Switch, Infinite	8	W10134247	Shield, Heat
3		Console, Assembly			(Right Rear and Left Rear)	9	3400882	Screw
	W11027376	Stainless				10	8272473	Cover, Upper Rear
	W11027381	Black Stainless	5	3196178	Screw	11	W10525121	Bracket, Console Mounting
			6		Electronic, Control (LCX)			
				W11038143	Black			


CHASSIS PARTS

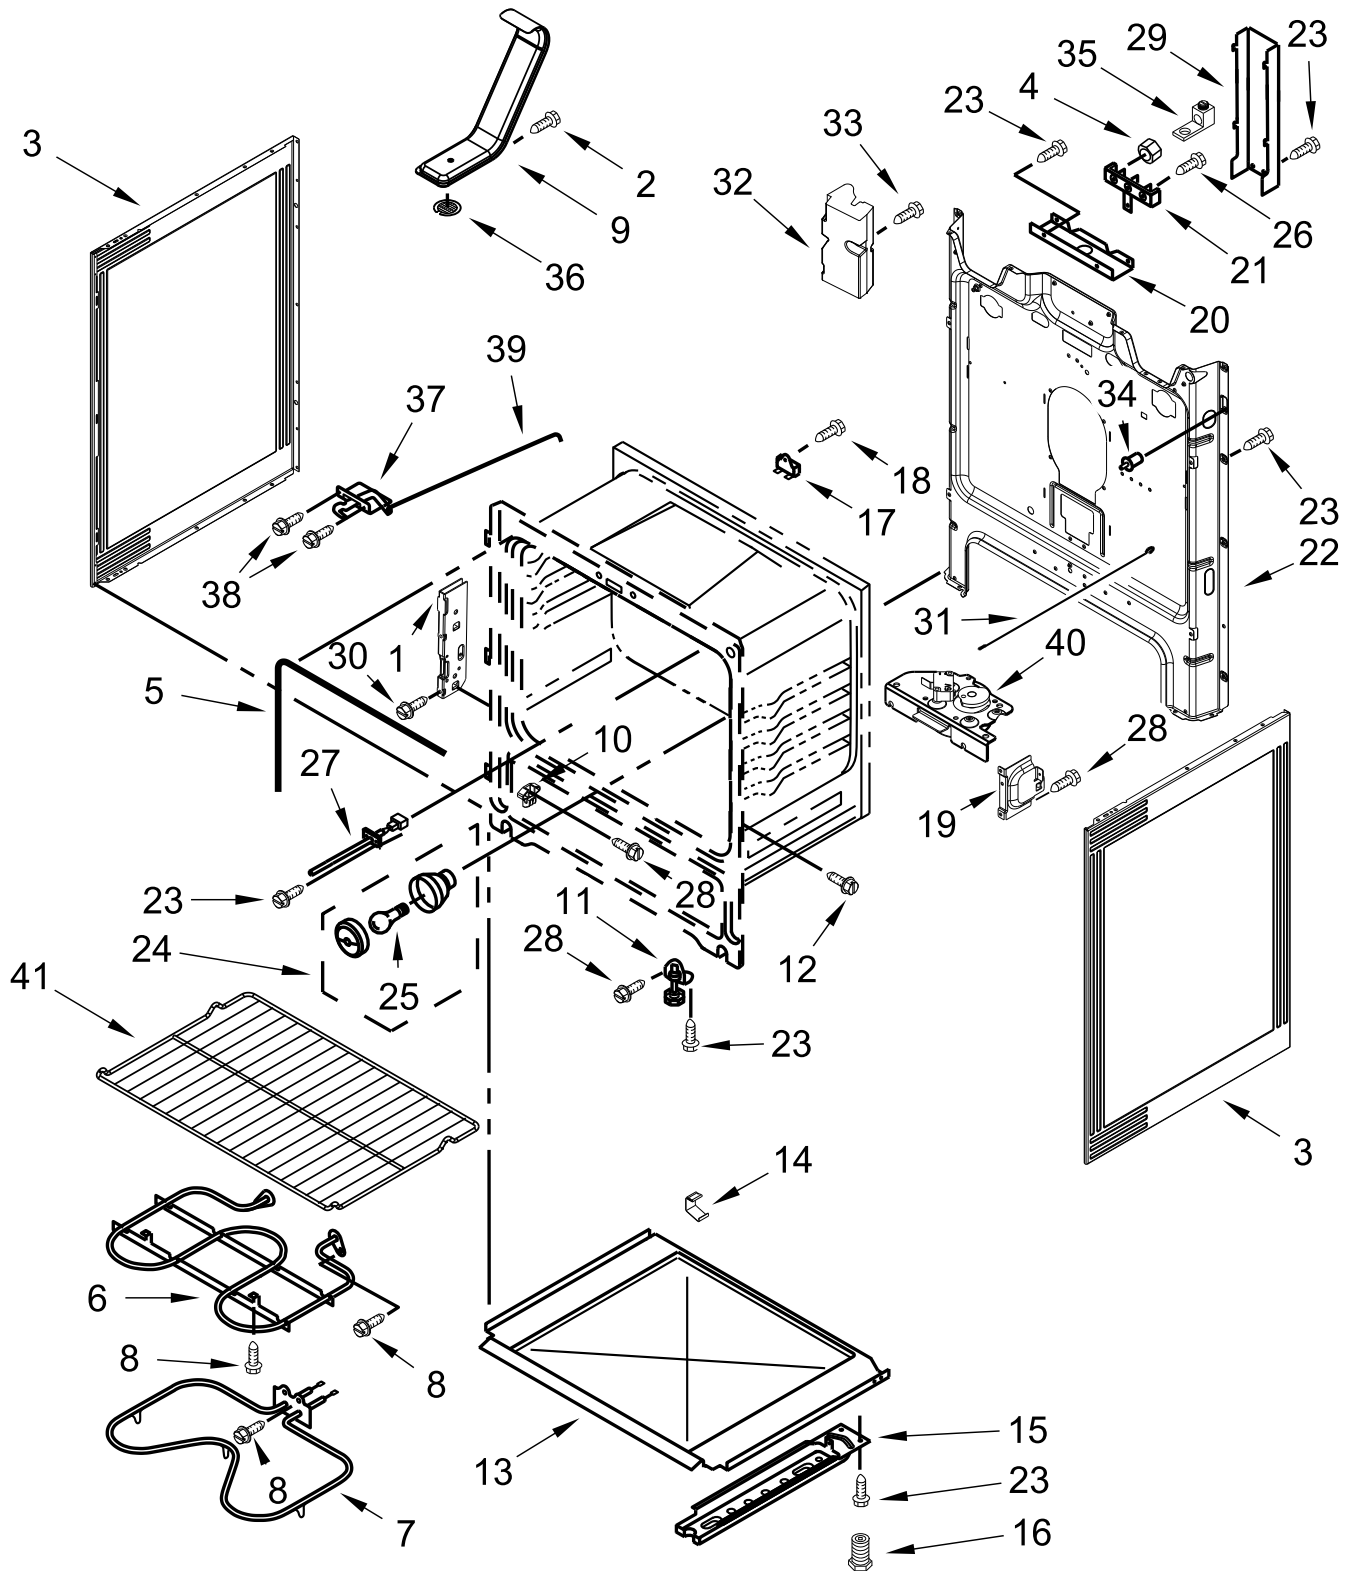

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	34	W10627802	Switch, Door
2	3196154	Screw	17	3196548	Fuse, Thermal	35	W10281322	Kit, Bare Wire Adapter Block
3		Panel, Side	18	3196172	Screw	36	9761301	Screen, Vent
	W10162245	Black	19	W10404688	Clip, Oven Support	37	9761013	Assembly, Door Latch (Front)
4	3400029	Nut	20	3186034	Bracket, Service	38	3196560	Screw
5	W10658354	Seal, Door	21	W10245259	Block, Terminal	39	W10078380	Rod, Latch
6	9757340	Element, Broil	22		Back, Main (Not Serviced)	40	W10107820	Assembly, Door Latch (Rear)
7	W11111743	Element, Bake	23	3196178	Screw	41	W10268578	Rack, Oven
8	3196174	Screw	24	W10454648	Assembly, Light			FOLLOWING PARTS NOT ILLUSTRATED
9	W10134285	Tube, Vent	25	311255	Bulb, Oven Light		W10774939	Insulation, Wrap
10	W10674705	Glide, Drawer Front	26	3400016	Screw		8272612	Insulation, Back
11	W10341186	Assembly, Front Foot	27	W10181986	Sensor, Oven		W10333344	Insulation, Flue
12	W10067840	Screw	28	3196169	Screw			
13	8054068	Retainer, Insulation	29	W10326122	Cover, Terminal Block			
14	W10137382	Clip, Panel	30	W10031780	Screw			
15	W10390007	Assembly, Base Rail (Right)	31	9757239	Rod, Door Switch			
	W10390008	Assembly, Base Rail (Left)	32	W10910404	Counterweight			
			33	W11034869	Screw			

DOOR PARTS

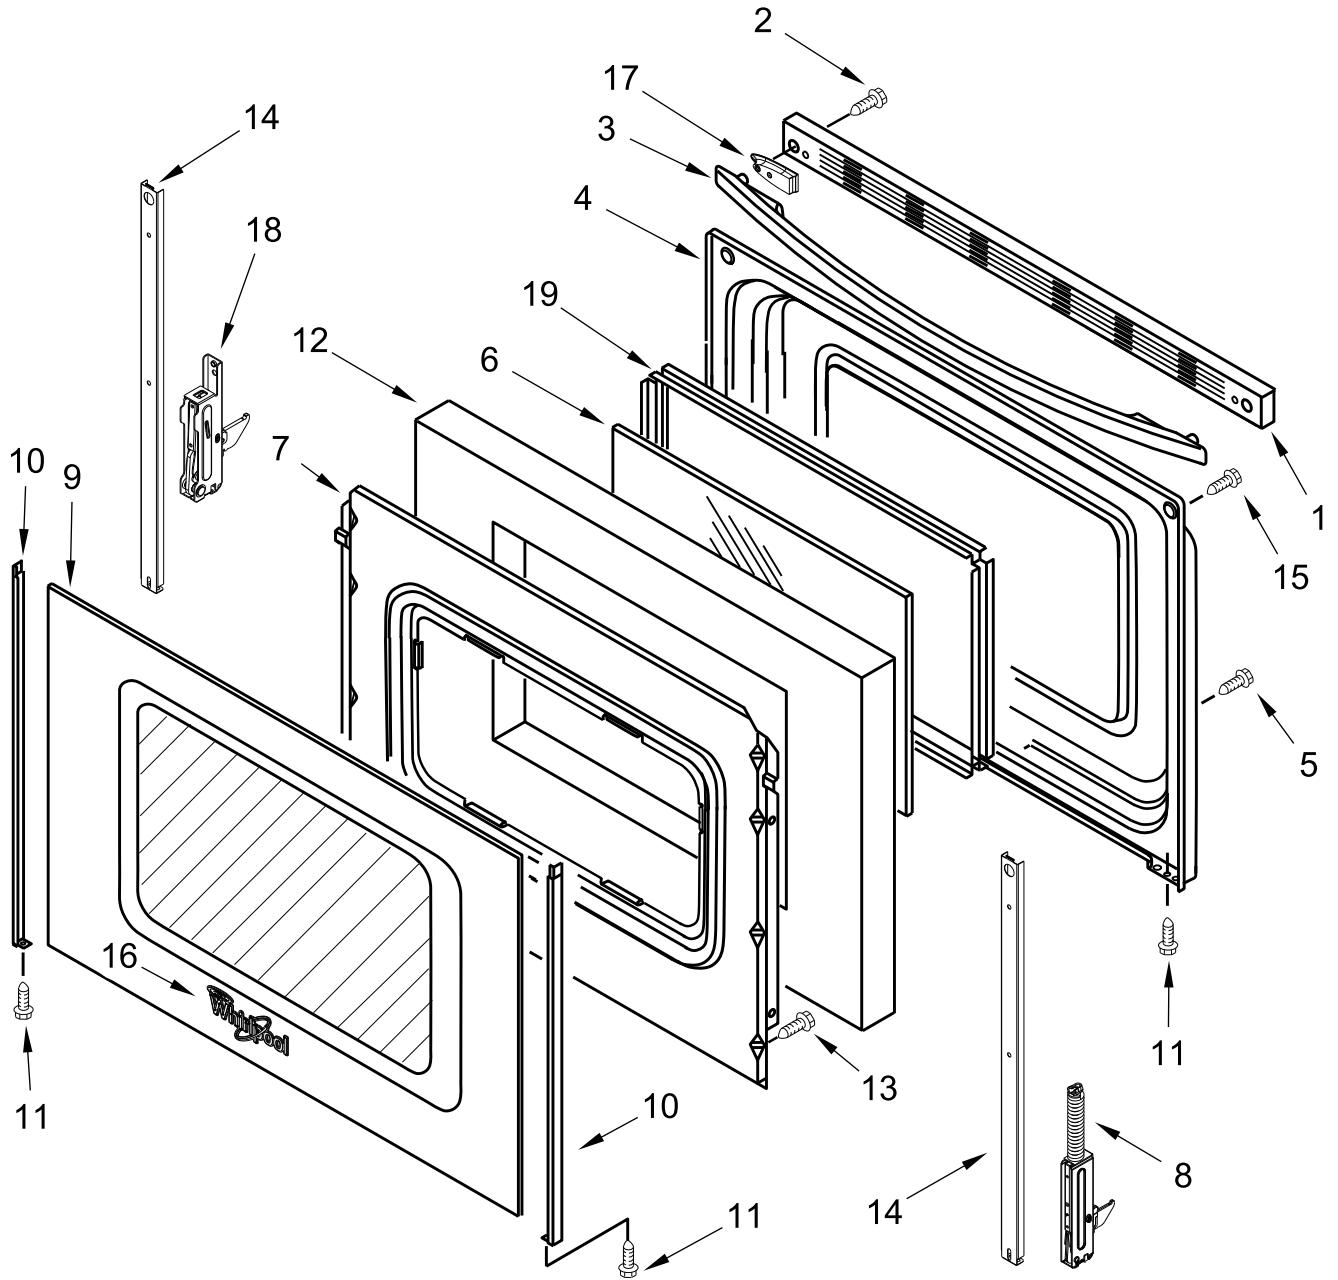


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10480830	Screw
3		Handle, Door
	W10875206	Stainless
	W10903342	Black Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	9761357	Retainer, Insulation

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299224	Hinge, Active (With Spring)
9		Glass Assembly, Outer Door
	W10861544	Stainless
	W11090765	Black Stainless
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10278991	Insulation, Door Strip
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16	W10884775	Nameplate
17		Standoff, Handle
	W11037027	Black
18	W10299227	Hinge, Door (Passive)
19	W10316950	Frame, Glass

DRAWER PARTS

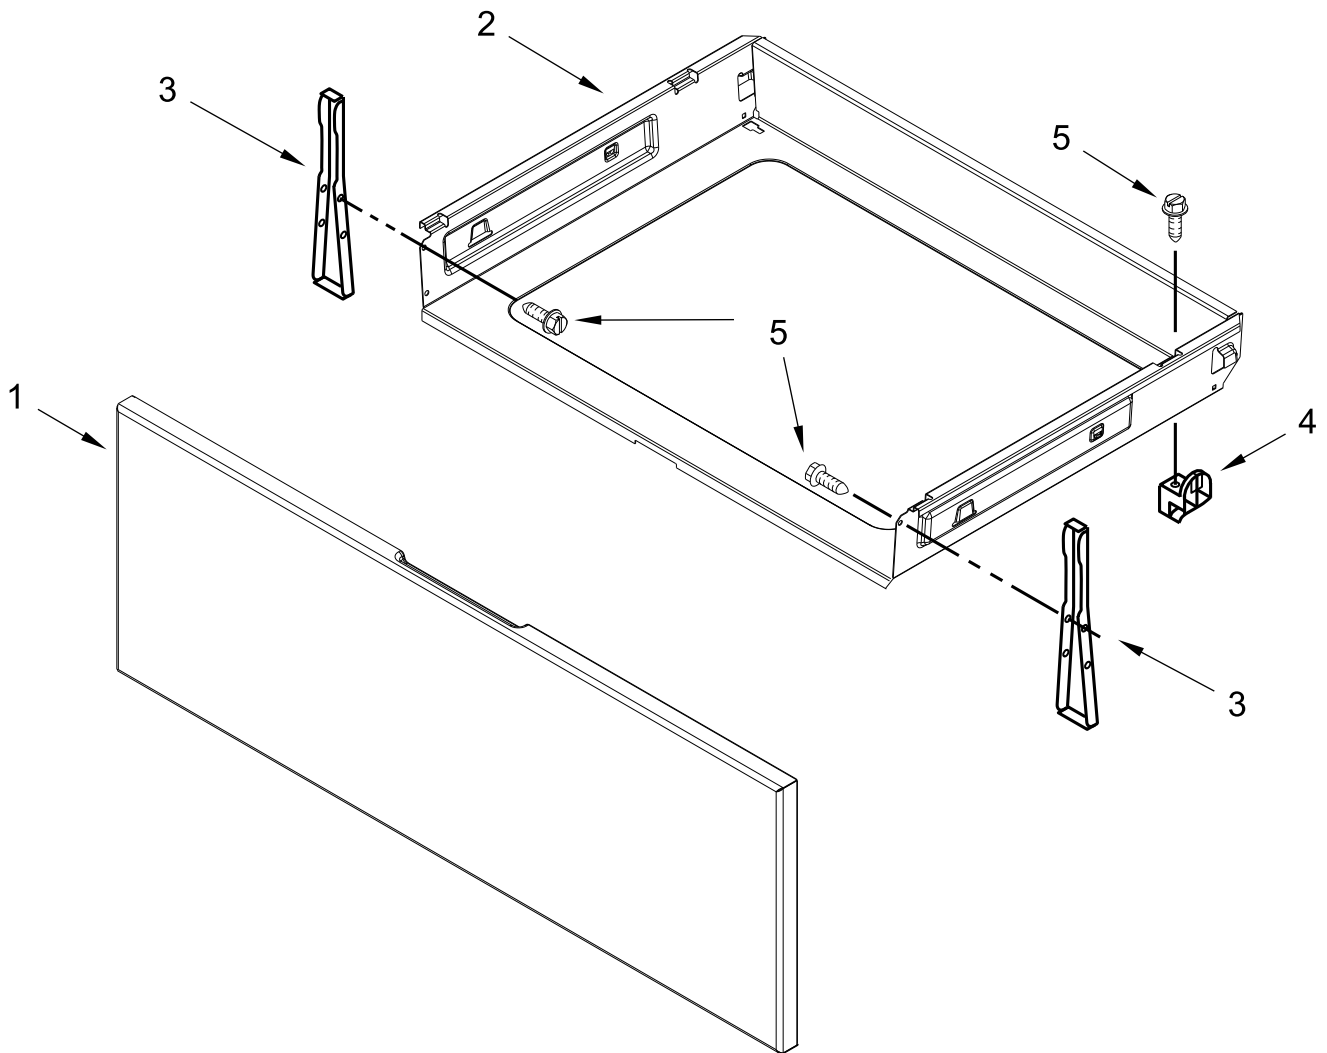

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10861542	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
	W11045573	Black Stainless						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	241430	Aluminum Foil
	3191048	Glass Cleaner
	4396923	Grid, Broiler Pan and Kit, Cooktop Care
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10355010	Cleaner, Kitchen & Appliance
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting