




30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE

MODELS:

WFE775H0HZ0 (Stainless)

WFE775H0HV0 (Black Stainless)


COOKTOP PARTS

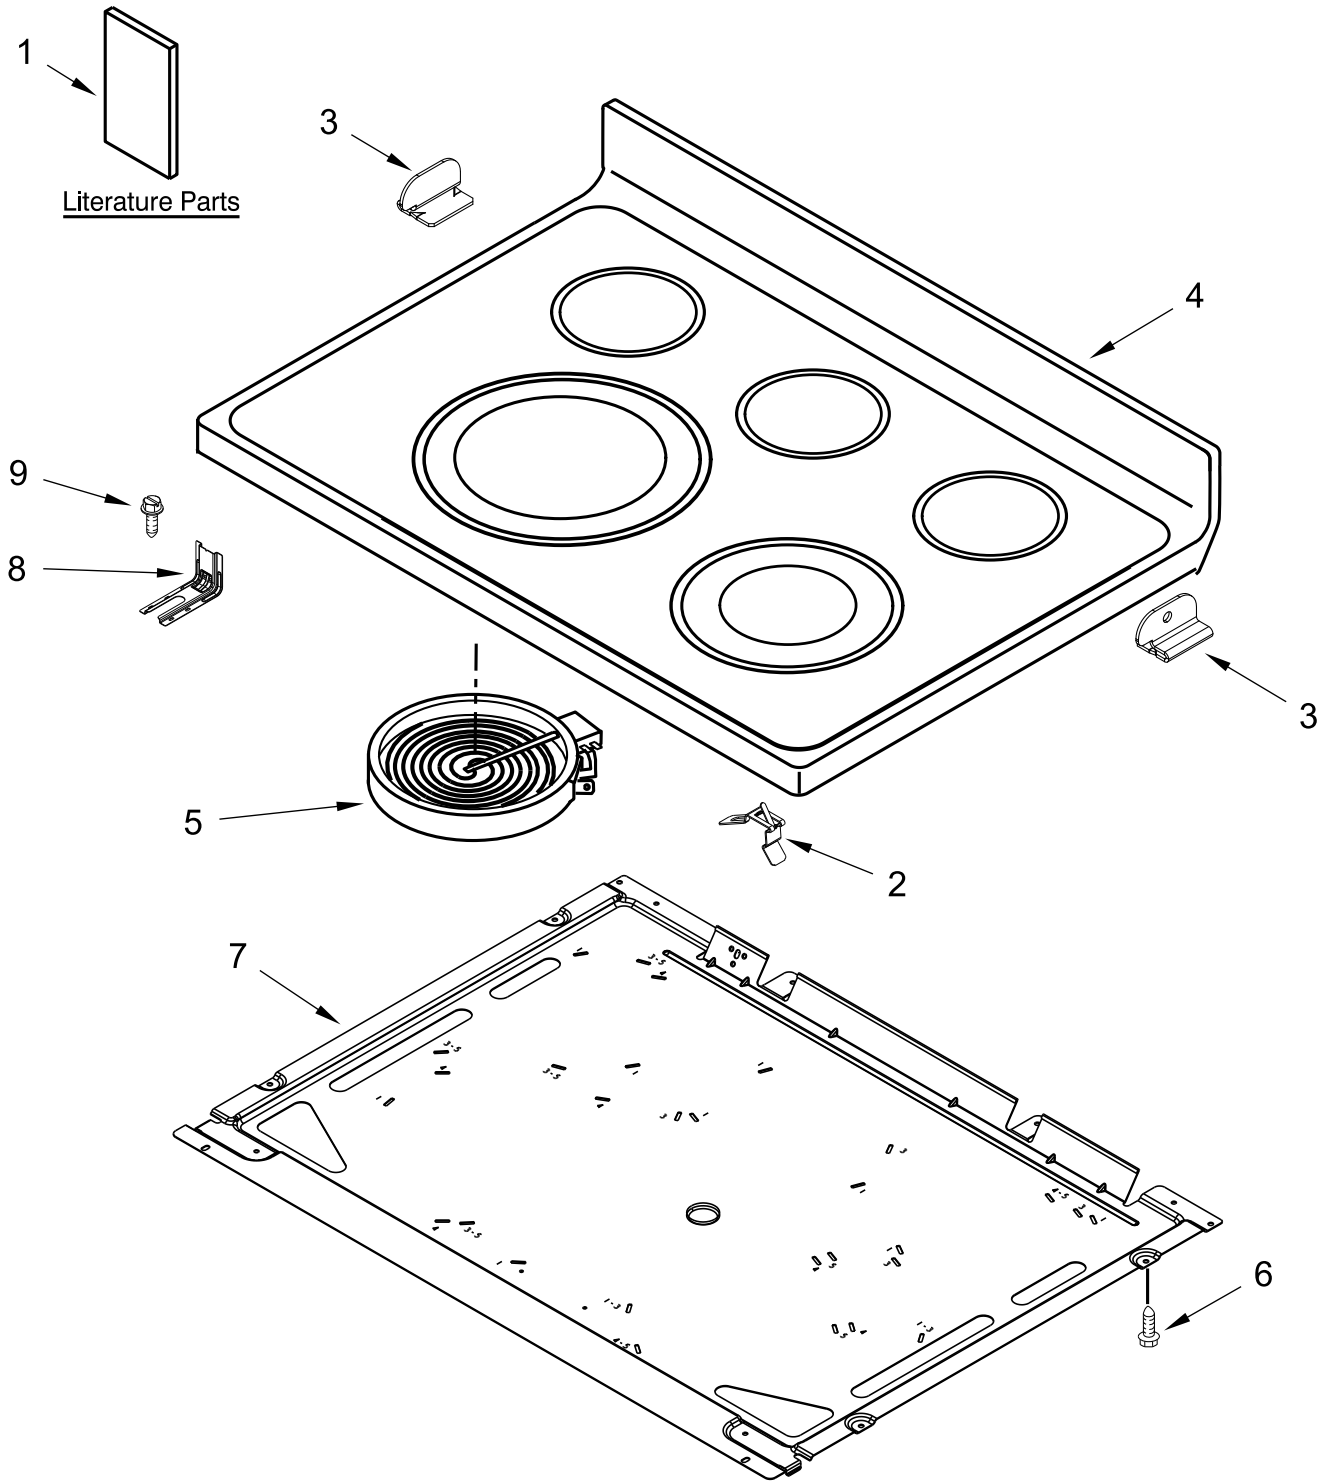

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	7	W10691223	Pan, Radiant Element
	W11085337	Instructions, Installation		W10865058	Black	8	W10306542	Bracket, Anti-Tip
	W11085357	Use and Care Guide	5	W10342780	Element (1300W) (Left Rear)	9	7101P485-60	Screw, Anti-Tip Kit
	W11096111	Tech Sheet (English)		8273994	Element (1200W) (Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11087255	Guide, Quick Start (English)		W10275048	Element (3000/1400W) (Right Front)	W10884163		Harness, Main
	9762761	Tips, Safe Cooking (English)		W10799048	Element, Warm Zone (Center Rear)	W10174460		Harness, Warm Zone
2	W10225448	Spring, Element		W10711900	Element (3000W) (Left Front)	W10083650		Harness, Sensor
3	W10607641	Bracket, Cooktop (Left)				W10884834		Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)	6	3196169	Screw	W10884836		Harness, Wire (Cooktop Left)


CONTROL PANEL PARTS

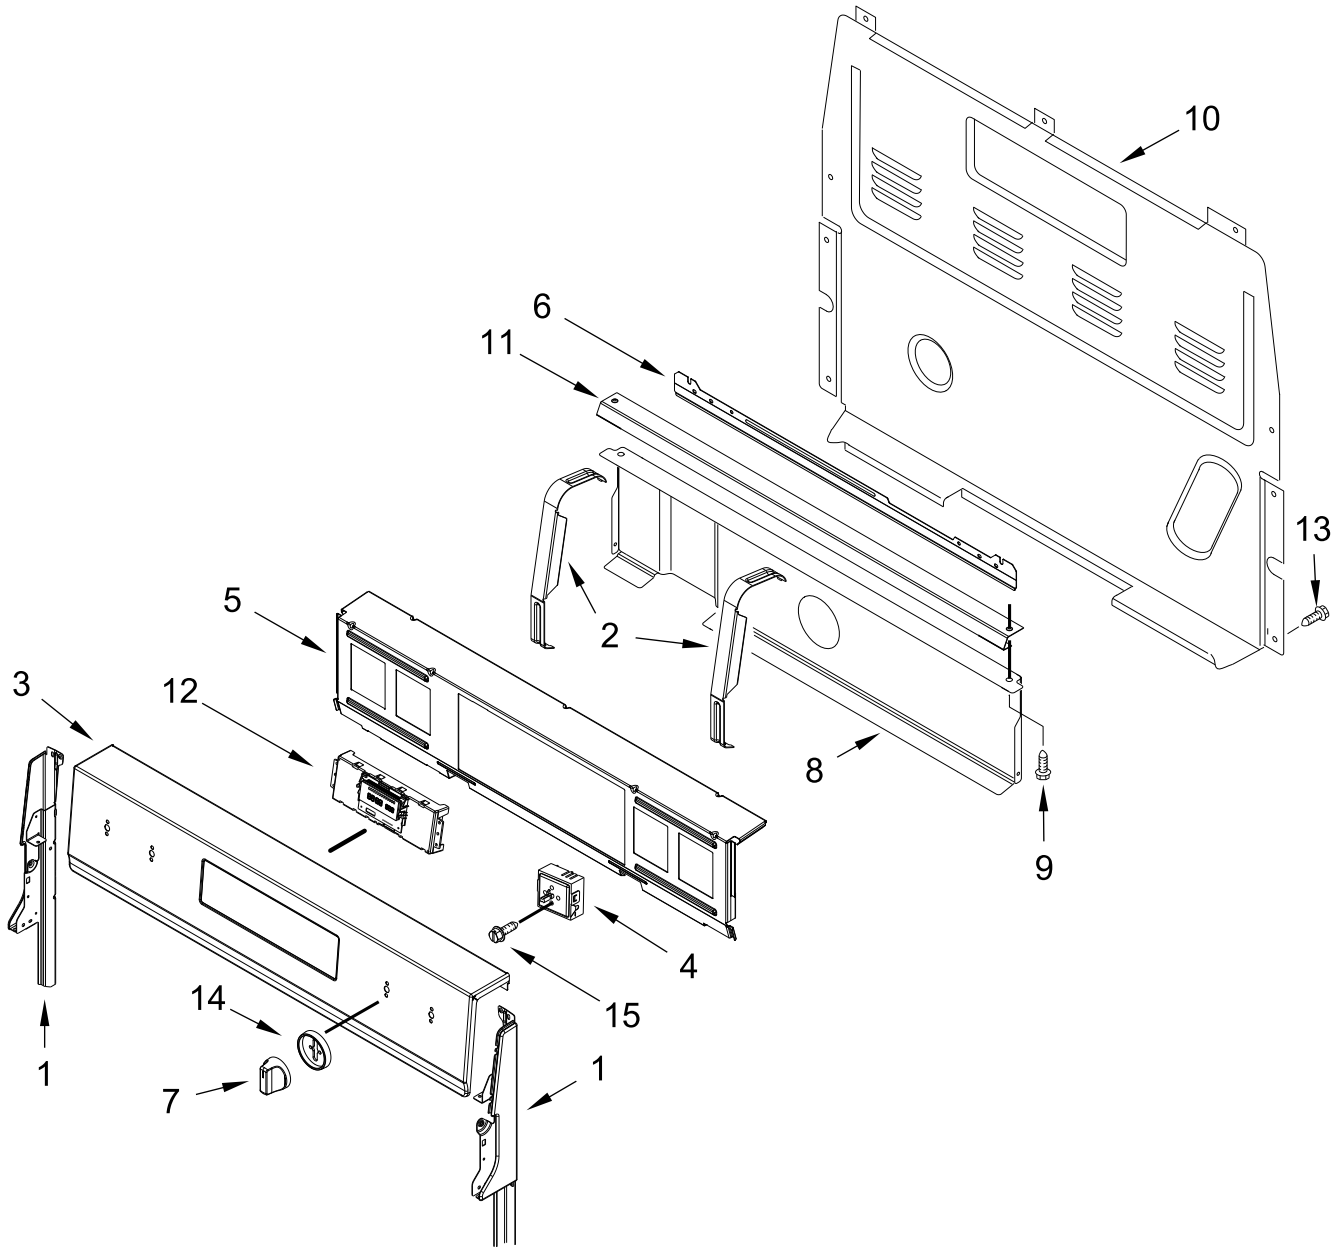

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10901802	Panel, Backer	12		Electronic, Control (LCX)
	W10869993	Black (Left)	6		Bracket, Eye Brow			
	W10869995	Black (Right)		W11046516	Black		W10885938	Black
2	W10856361	Bracket, Control	7		Knob	13	3196178	Screw
3		Console		W10917219	Stainless	14		Bezel
	W10869985	Stainless		W10917220	Black Stainless		W10850042	Stainless
	W10881622	Black Stainless	8	W10134247	Shield, Heat		W10917223	Black Stainless
4	W10437092	Switch, Infinite (Left Front & Right Front)	9	3400882	Screw			
	W10578768	Switch, Infinite (Right Rear)	10	8272473	Cover, Upper Rear			
	W10437094	Switch, Infinite (Left Rear)	11	W10525121	Bracket, Console Mounting			


CHASSIS PARTS

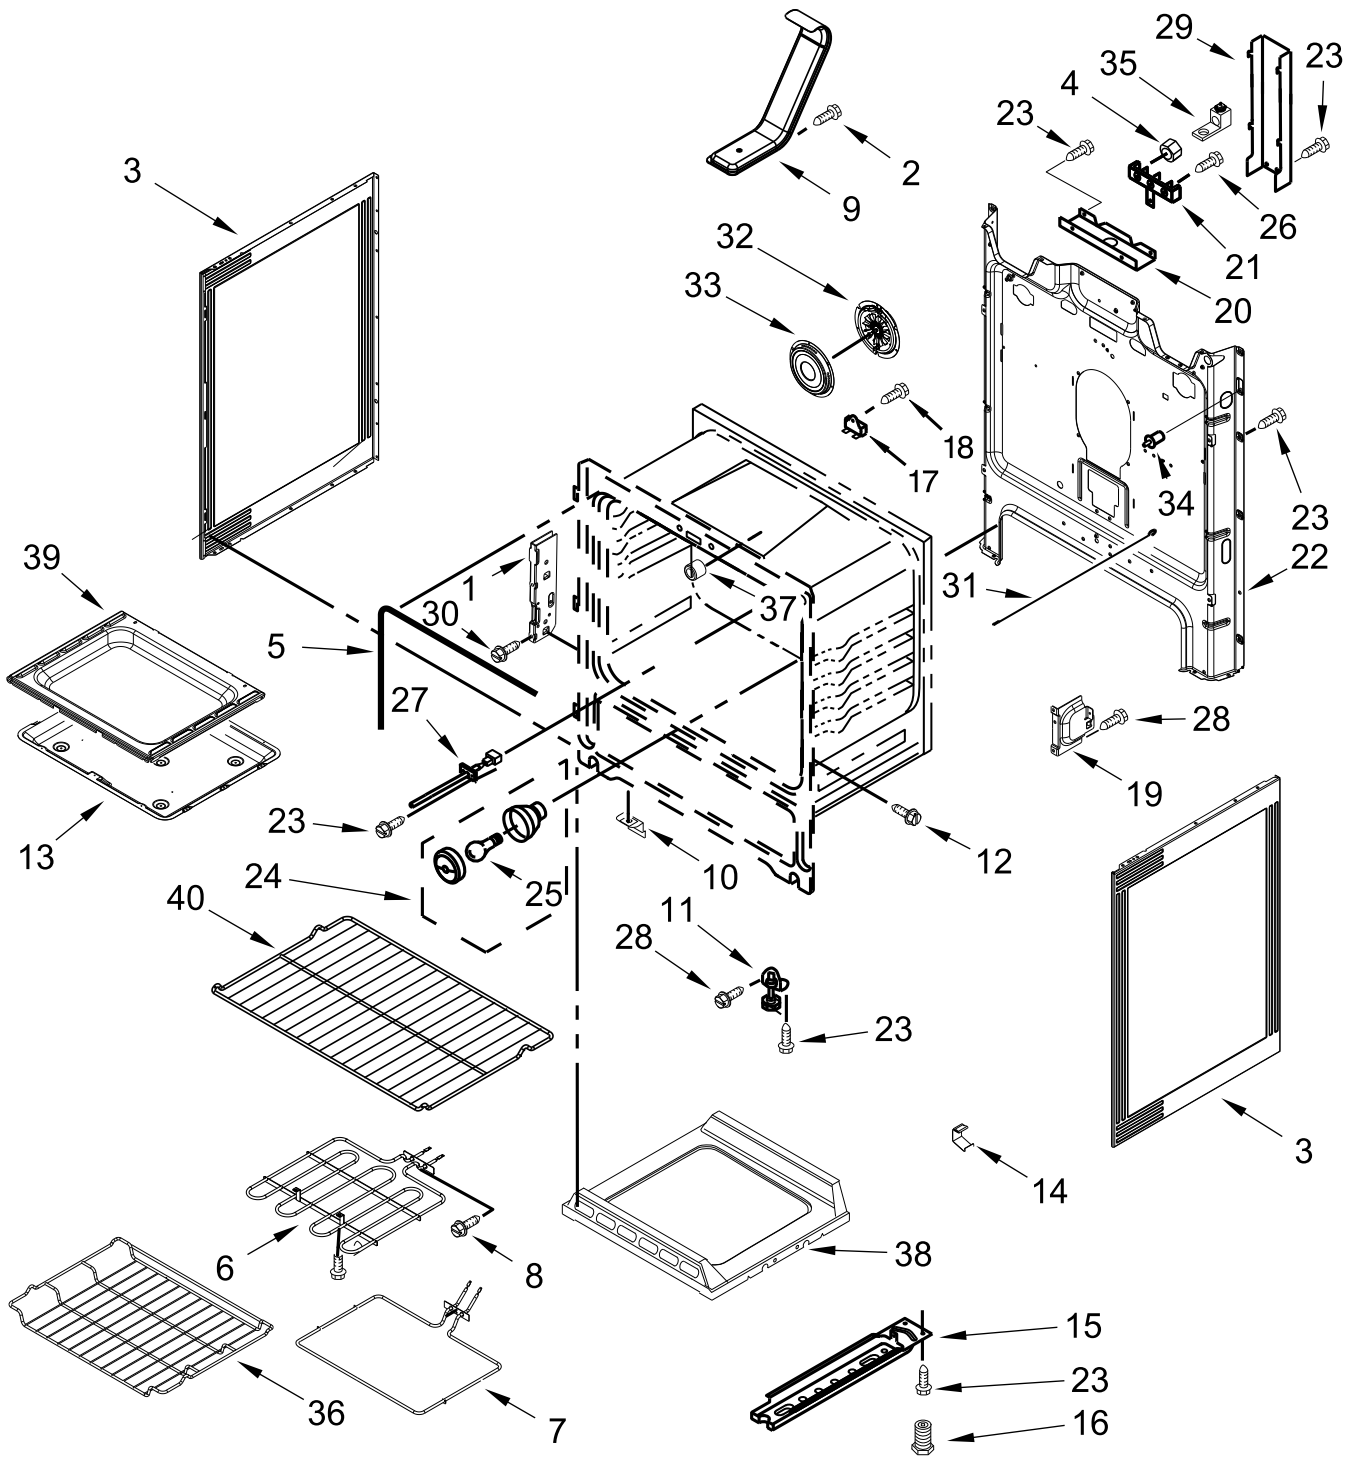

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	19	W10273002	Bracket, Oven Support	39	W10774446	Bottom, Oven
2	3196165	Screw	20	3186034	Bracket, Service	40	W10531060	Rack, Oven
3		Panel, Side	21	W10245259	Block, Terminal			FOLLOWING PARTS NOT ILLUSTRATED
	W10162245	Black	22	W10273169	Back, Main			
4	3400029	Nut	23	3196178	Screw		W10194393	Insulation, Wrap
5	W10162385	Gasket, Door	24	W10454648	Assembly, Light		W10225524	Insulation, Back
6	W10544951	Element, Broil	25	311255	Bulb, Oven Light		W10225523	Insulation, Bottom
7	W10774342	Element, Bake	26	3400016	Screw		4820F015-59	Insulation, Strap
8	W10362924	Screw	27	W10181986	Sensor, Oven			
9	W10134285	Tube, Vent	28	3196169	Screw			
10	W10035900	Support, Oven Bottom	29	W10326122	Cover, Terminal Block			
11	W10341186	Assembly, Front Foot	30	W10031780	Screw			
12	W10067840	Screw	31	W10273192	Rod, Door Switch			
13	W10346147	Pan, Bake	32	W10617485	Fan, Convection			
14	W10137382	Clip, Panel	33	W10346154	Cover, Convection			
15	W10390007	Assembly, Base Rail (Right)	34	W10627802	Switch, Door			
	W10390008	Assembly, Base Rail (Left)	35	W10281322	Kit, Bare Wire Adapter Block			
16	W10058460	Foot, Leveling	36	W10289145	Rack, Oven (Gull-Wing)			
17	3196548	Fuse, Thermal	37	9758701	Spacer, Door			
18	3196172	Screw	38	W10726740	Shield, Heat			


DOOR PARTS

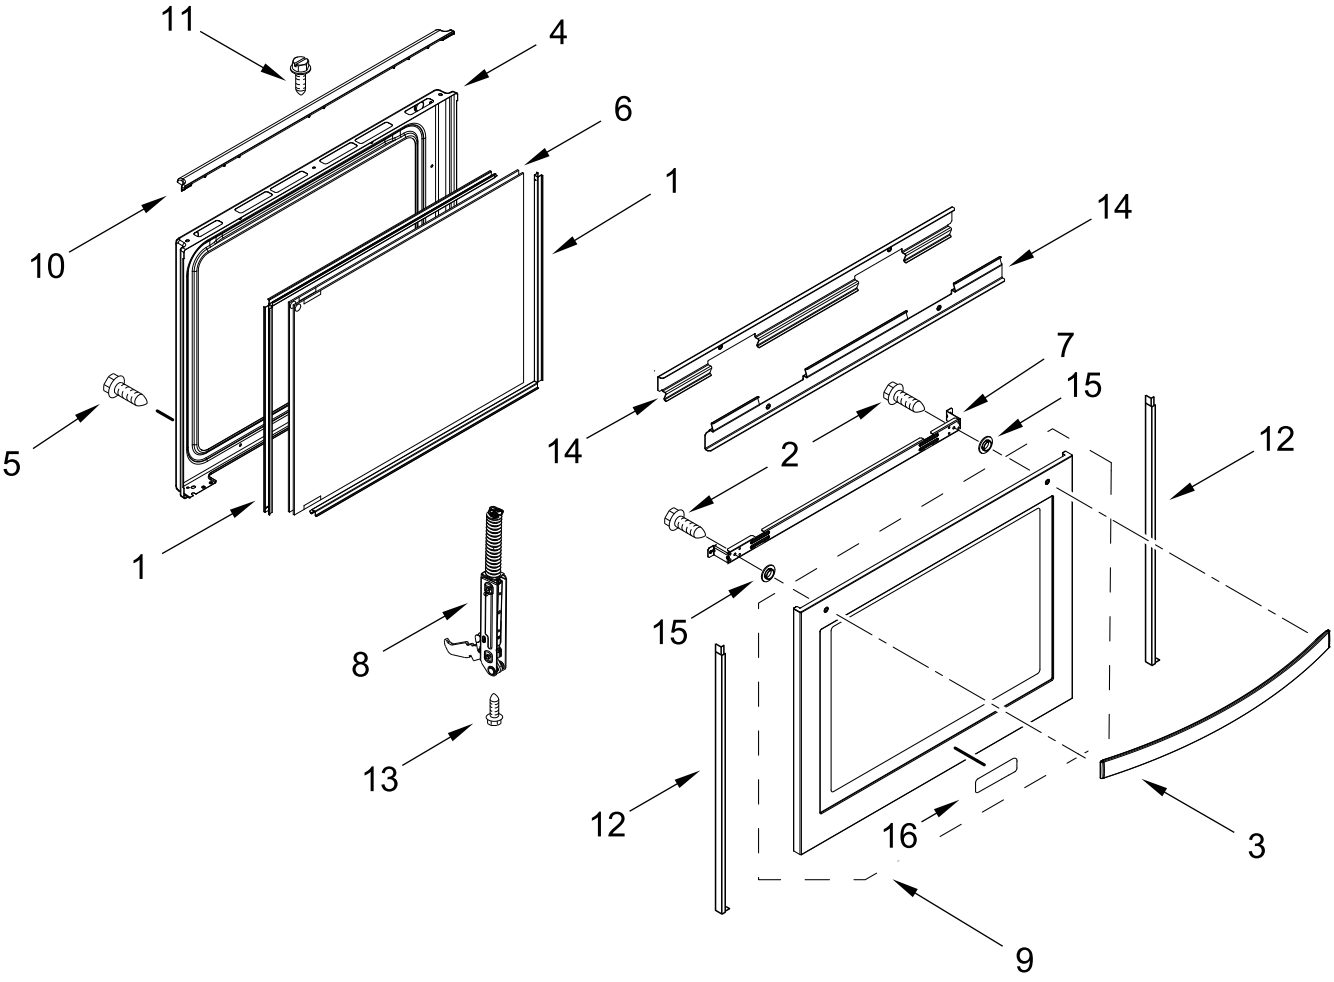

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10813142	Spacer, Glass	9		Glass Assembly, Outer Door	15	7109P084-60	Washer, Fiber
2	W10480830	Screw				16	W10884775	Nameplate
3		Handle, Door		W10864214	Stainless			
	W10918786	Stainless		W10888239	Black Stainless			
	W10918791	Black Stainless	10		Vent, Trim			
4	W10826568	Liner, Door		W10887939	Black			
5	W10031790	Screw	11	W10327235	Screw			
6	W10813616	Glass, Inner	12	W10813139	Rail, Vertical Support			
7	W10541911	Bracket, Glass Upper Handle	13	W10031780	Screw			
8	W10885519	Hinge, Door (Active)	14	W10813140	Rail, Horizontal Support			

DRAWER PARTS

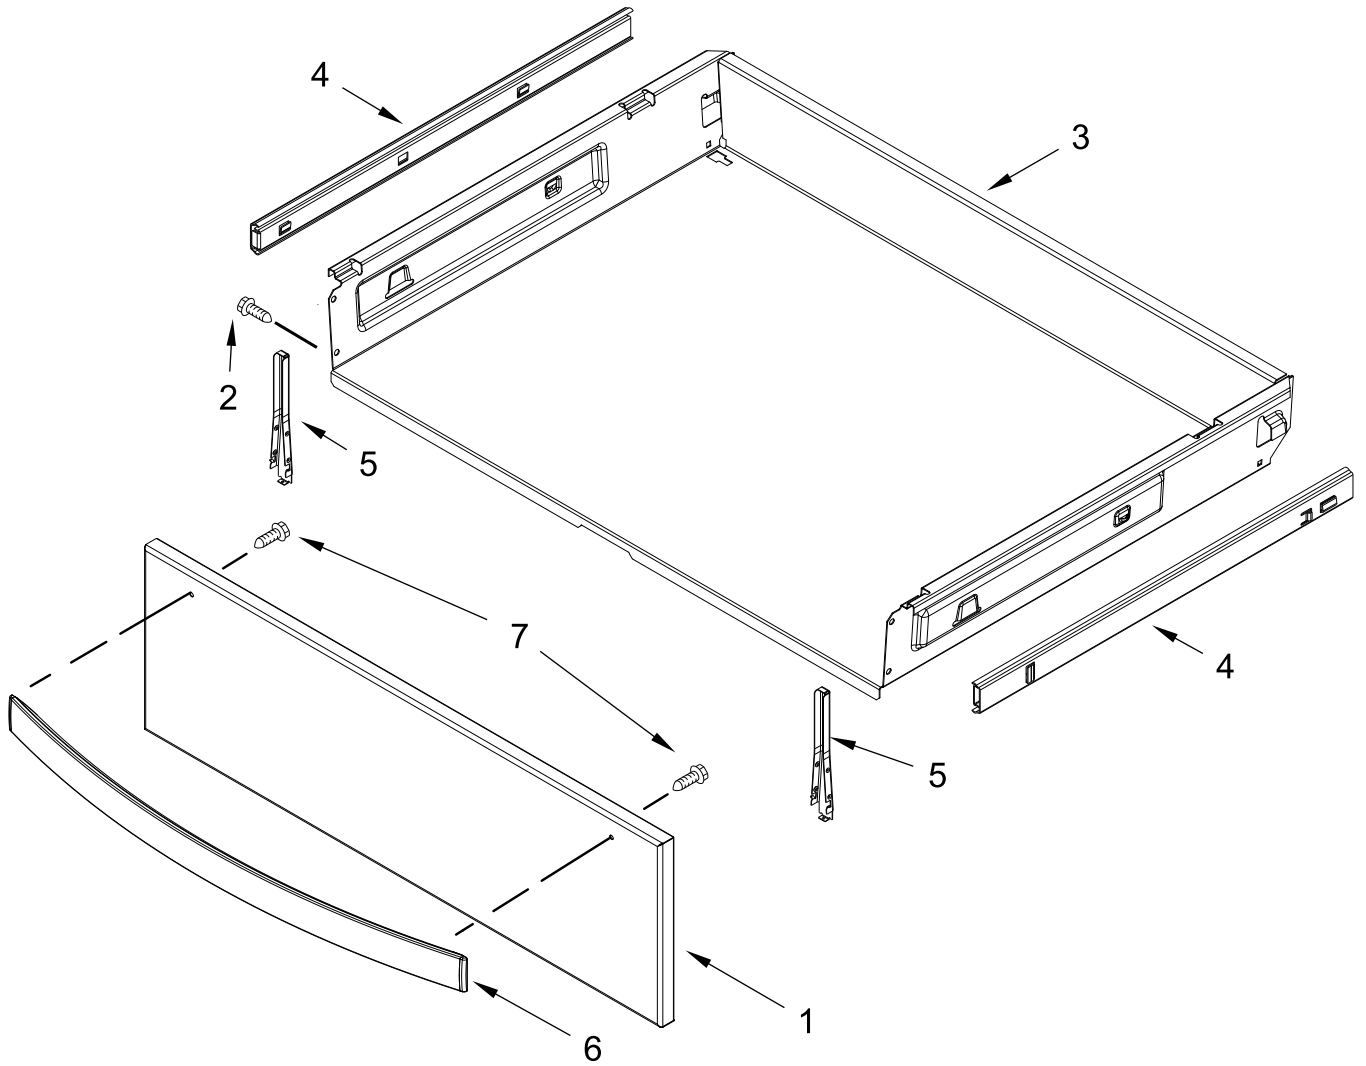

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10688022	Drawer, Storage	6		Handle, Door
	W10864527	Stainless	4	W10441804	Slide, Drawer (Left)		W10918786	Stainless
	W11042922	Black Stainless		W10441805	Slide, Drawer (Right)		W10918791	Black Stainless
2	3196169	Screw	5	W10318027	Bracket, Drawer	7	3400882	Screw

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	241430	Aluminum Foil
	3191048	Glass Cleaner
	4396923	Grid, Broiler Pan and Kit, Cooktop Care
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10355010	Cleaner, Kitchen & Appliance
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting