



847200

Water Filter Cartridge

SKU

847200

The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2019

Other product downloads available at fisherpaykel.com

www.fisherpaykel.com

Description · Use with Fisher & Paykel refrigerators with Model Numbers starting with RF610, RF522, E522, E442, E422, and E402. Please check your Product code to determine which filter is right for you. · A control panel icon on your fridge will flash to remind you it's time to replace your filter · We recommend the filter is changed

every 6 months or less for optimal water flowImportant

Note: Please check your Product code or the Filter Part number which is written on the Filter, to ensure you order

the correct Filter: If your Product code starts with a

25xxx, then order this filter. If your Product code starts

with a 24xxx, you will need to order Part #836848. If

you are unsure of your Product Code, click here to find out where you can find it on the fridge itself. If you're not able to find it, please contact our Customer Care Centre.



A PEACE OF MIND SALE

24 Hours 7 Days a Week Customer Support

T 1.888.936.7872 W www.fisherpaykel.com