24" Bar Handle Dishwasher

100 Series - White SHX3AR72UC





SHX3AR72UC White

Also available in: Stainless Steel SHX3AR75UC Black SHX3AR76UC

Bosch dishwashers incorporate 18 unique sound-reducing technologies, to make **Bosch the quietest** dishwasher brand in North America.1

Features & Benefits

50 dBA: Quietest dishwasher brand in North America.1

Height adjustment upper rack.

Stainless steel tall tub with polypropylene bottom delivers durability.

Sanitize option eliminates bacteria and enhances drying results.

24/7 Overflow Protection System® helps prevent water leaks.

General Properties	
Number of wash cycles	6
Number of options	2
dBA	50
Drying system	PureDry®
Third rack	No
Rack adjustability	Manual
Tub material	Stainless steel/ polypropylene
Control type	Buttons
Concealed water heating element	Yes
Leak protection system	24/7 Overflow Protection
NSF®-certified² sanitize option	Yes
Water softener	No
Five-level wash	Yes
ChildLock	No
Special features	50 dBA, 24/7 Overflow Protection, Detergent Tray
Efficiency	
Water usage per cycle	3.2
Energy efficiency class	Tier 1
ENERGY STAR® qualified	Yes

Efficiency	
Water usage per cycle	3.2
Energy efficiency class	Tier 1
ENERGY STAR® qualified	Yes
Total annual energy consumption (kWh)	269
Total annual water consumption (g)	688







Capacity		
Number of place settings	14	
Technical Details		
Watts (W)	1400 W	
Current (A)	12 Amps	
Volts (V)	120 V	
Frequency (Hz)	60 Hz	
Power cord full length	67"	
Power cord install length from edge of unit when facing the door (in) ³	Left – 45" Right – 50"	
Minimum water pressure (lb/sin)	15	
Length outlet hose (in)	90 1/2"	
Dimensions & Weight		
Overall appliance dimensions (HxWxD) (in)	33 7/8" x 23 9/16" x 22 9/16"	
Required cutout size (HxWxD) (in)	33 7/8" x 24" x 24"	
Adjustable feet	Yes	
Net weight (lbs)	71 lbs	
Accessories-Optional		
Junction Box	SMZPCJB1UC	
Dishwasher Drain Hose Extension 76 3/4"	SGZ1010UC	
Dishwasher Accessory Kit	SMZ5000	
DoubleFlex Silverware Basket	SMZ4000UC	
Edge Protector + Power Cord Clip Install Kit	SMZEPCC1UC	



²Certification to NSF/ANSI Standard 184 for residential dishwashers.

³September 2020 running production change to remove adhesive routing clips for power cord. These clips and the edge protector are now included in the dishwasher accessory kit # SMZEPCC1UC.



Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST). Sat 6 am to 3 pm PST). Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


24" Bar Handle Dishwasher


100 Series - White SHX3AR72UC





Installation Details

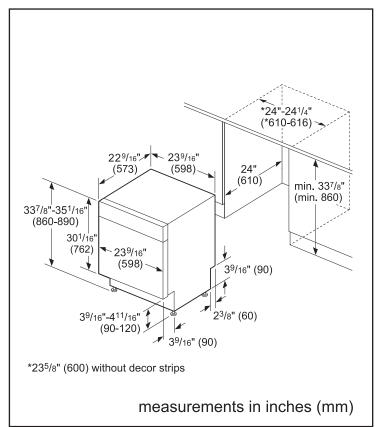

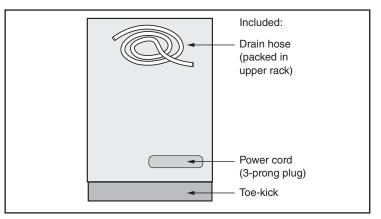

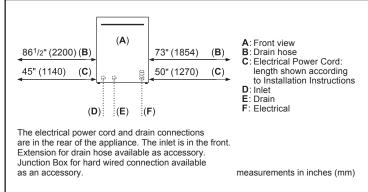

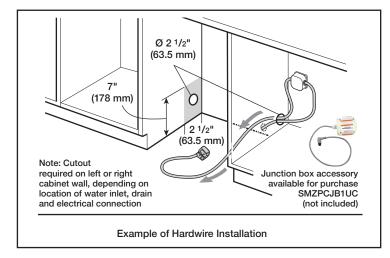

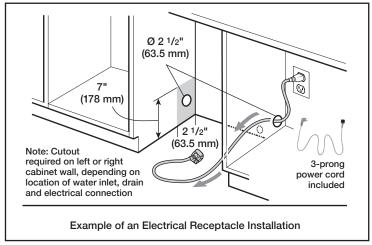

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


24" Bar Handle Dishwasher

100 Series - White SHX3AR72UC



Installation Details

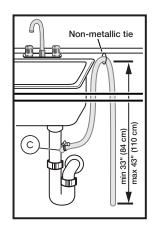

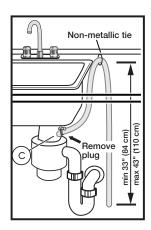

Note: Plumbing installations will vary - refer to local codes. Drain hose included is $90\,^{1}/^{2}$ " (230 cm) and can be extended to a maximum of $168\,^{1}/^{2}$ " (428 cm).

Always use the approved drain hose extension kit (SGZ1010UC).

Ensure a portion of the drain hose is raised between min. 33" (84 cm) and max. 43" (110 cm) above the cabinet floor.

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.